 
W SK-200 SKIMMER INSTRUCTION SHEET

 
Hereby we sincerely thank you for purchasing our product. To operate the product safely, please do read this manual carefully.

 
Warning:

- 1. Before using the product, please check if there is any the product. damage on the power cord. if yes, please do not use
- 2. To avoid default, please use the product under the regulated voltage and frequency.
- 3. Please do not plug or pull the power cord if your hands
- When maintaining or moving the product or when there is any abnormal situation, please turn off the power first. 5. Please make sure the plug and socket are protected
- be "U" shape(see below picture) to avoid the water go inside the Please keep the power cord to

 
away from water.
















socket all

 


 


 


 

     


 




 

















marine water	do not re-equip	long the power cord.
nlease perio	the product	cord.
marine water please periodically remove the	do not re-equip the product ,to avoid any defa	0

 

 

 

Model		8. Wi	7. Bo	6. Wa	5. Im	4. Sp	3. Sk	2. Sk	1. Top	Spare
Voltage		Wire cord	Bottom cover	Water pump	Impeller holder	Sponge	Skimmer body	Skimmer	pcover	e part:
Р	- 1				-					

	SK-200		Model	
AC230V/60Hz	AC120V/60Hz	AC230V/50Hz	Voltage	
3.4W	3.4W	3.0W	Power consumption	
170-200L/H	170-200L/H	170-200L/H	Output	

Abnormality handling:

Clean or replace filter mediums	Filter medium dirty	Small output
Replace or reinstall properly or get out the dirt.	Impeller damaged or dirt or not installed in right place.	High noise
reinstall properly or get out dirt	Impeller was not installed properly or stucked by dirt	properly
Replace new pump	Pump head burned	Not work
Plugged into power supply	Not plugged	
Handling method	reason	symptons